 


RW4 PLUS with Snoop Programming Instructions

1

Insert Original Key, Press "Rd".
Insert SNOOP, Press "ENTER".

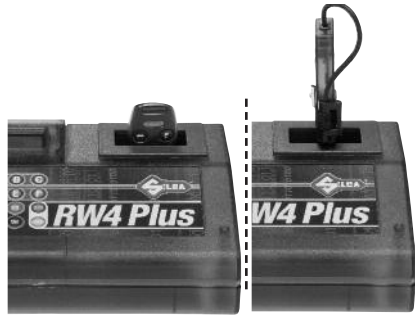

 
2

Place the SNOOP on the customer's key. Insert key into ignition and turn to "ON" position 2 times.



3

Place the SNOOP in RW4 PLUS, Press "ENTER". The RW4 PLUS is downloading data from the SNOOP in this process.

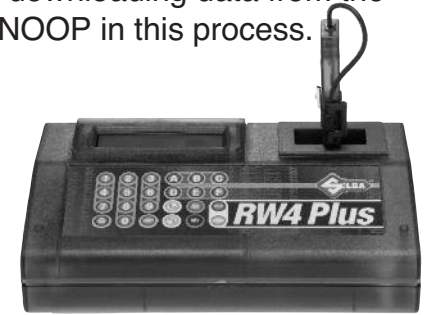

4

Insert Original Key, Press "Rd".
This is verification process.



5

Insert Ilco® EK3P, Press "Wr".



6

Ilco® EK3P is now ready for cutting.

