


Attention If you use either a NEMA 14-50 or NEMA 6-50 adapter, check amperage of the circuit breaker before charging.

- 50 amp breaker → default charging with 40 amp
- 40 amp breaker → manually select 32 amp charging
- 30 amp breaker → manually select 24 amp charging

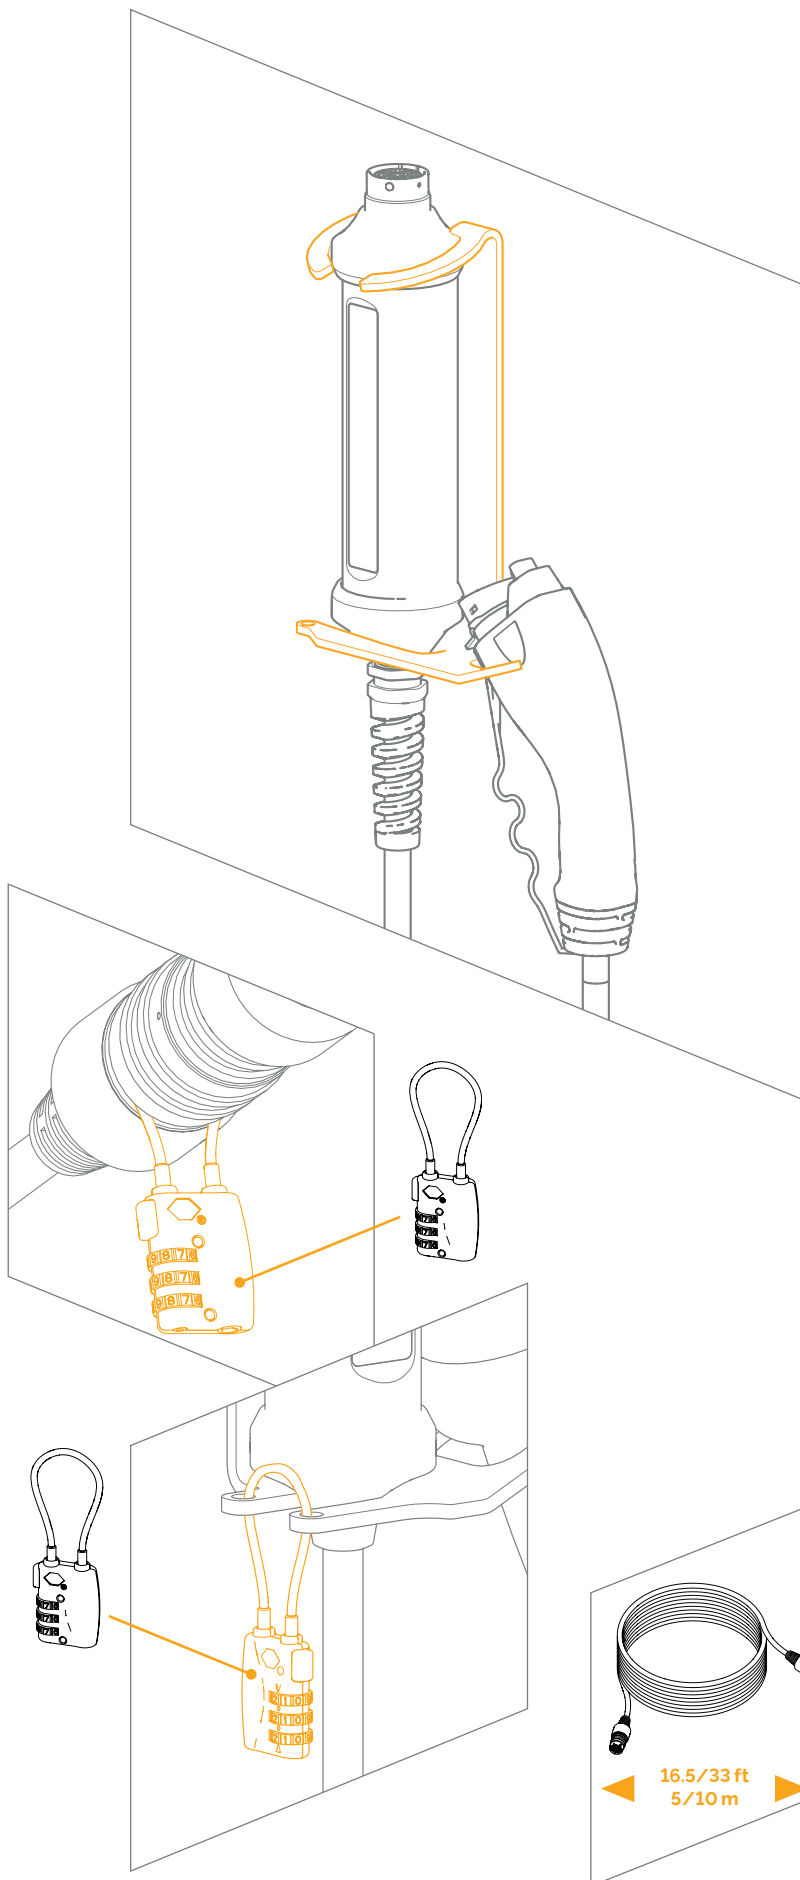



- NEMA 5-15
- NEMA 5-20
- NEMA 6-15
- NEMA 6-20
- NEMA 6-50
- NEMA 14-30
- NEMA 14-50
- NEMA TT-30

